



STEP 1
Lay out the frame and turn on the blower.



STEP 2
The frame will inflate in about 2 minutes.



STEP 3
Attach the white screen to the black frame.



*The image above is for reference only; the accessories are slightly different.

STEP 4
Let it stand upright and attach the wind cord.

INCLUDED ACCESSORIES:



1 x Storage Bag 1 x Projection Screen 1 x Frame 6 x Iron Stakes 4 x Ropes 1 x Blower

WARNING:

Please read this manual carefully before using the product. Failure to follow these instructions may result in serious injury.

1. Do not touch the screen surface with your fingers or any hard objects. Avoid splashing liquids such as milk, fruit juice, or chemicals onto the screen. Keep the screen away from high temperatures and open flames.
2. If the screen becomes dirty, clean it gently using a soft cloth or a cotton ball. Do not use organic solvents or harsh chemicals on the screen surface.
3. Avoid applying strong pressure or squeezing the screen.
4. Do not store the product in damp or humid conditions. Keep it dry at all times.
5. Ensure the area is well-ventilated and keep the screen away from any fire sources.
6. Keep the inflation fan running continuously while the screen is in use.
7. Do not unplug or switch off the blower while the screen is inflated or in operation.
8. The blower is designed to emit a normal operating noise of approximately 70 dB. This is safe and does not impact performance—feel free to use it with confidence.
9. Children should use the device only under adult supervision to prevent accidental contact.
10. Avoid using the device in severe weather conditions, such as strong winds or rainy days.

CARE AND MAINTENANCE

CLEAN THE SCREEN

1. Regularly use a soft cleaning cloth to gently wipe dust off the surface of the screen and keep it clean.
2. For stains, use specialized screen-cleaning agents. Do not use cleaning agents that contain alcohol or corrosive substances.

MAINTAIN THE SCREEN

1. Avoid hanging heavy or sharp objects on the screen to prevent damage.
2. Do not expose the screen to direct sunlight or humid environments for prolonged periods, as this may affect its lifespan.
3. Regularly check the frame for tightness, and stop using it immediately if any air leakage is detected.

AFTER USE

1. Please retract the Pop-Up Screen into its outer shell when not in use.

CUSTOMER SERVICE:
info@ayonz.co.uk

DISTRIBUTED BY: AYONZ LIMITED
Unit 3 Cedar Court, 1 Royal Oak Yard London, SE1, 3GA