

# TELEFUNKEN

## 8KG/5KG FRONT LOAD WASHER/DRYER COMBO

TF8060AU8FLWD



# INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

General Safety	4
Product Overview	10
Operation	12
Getting Started	18
Product Installation	20
Instructions	24
Cleaning and Maintenance	26
FAQs	30
Specifications	31
Support	Last Page

# GENERAL SAFETY

## IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Appliance.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

Pay close attention to messages that follow this safety alert symbol or the words **DANGER**, **WARNING** or **CAUTION**. These words will be used to alert you of potential hazards that and injure you and others. Following these instruction will tell you how to reduce the chance of injury and the possible dangers if instructions aren't followed.



### WARNING

This symbol indicates when there is a serious risk of injury if you do not pay attention to the warnings.



### CAUTION

This symbol indicates when to be careful to avoid a serious risk of injury to oneself or damage to property.

## ELECTRICAL SAFETY

- **Voltage:** Plug the appliance to a 220-240V, 50Hz, properly earthed power outlet, it must be in good working order.
- **Power connection:** Do not use an adaptor or an extension cord.  
Plug the power plug directly into a separate power point that cannot be accidentally turned off, and that is easily accessible so you can switch it off if needed.
- **Power cord:** Do not kink or damage the power supply cord. Make sure it is behind the appliance so no one can step on or place anything on the power supply cord or against it. A damaged power plug may overheat and cause a fire.
- **Damaged cord:** Do not use a cord that shows cracks or damage. Any damage to the cord may cause a short circuit, fire and/or electric shock.  
Contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice
- **Disconnection:** Never pull the power cord to unplug appliance. Grip the plug and pull straight out from the power point.
- **Electrical work:** If the installation of this appliance requires any electrical work, make sure it is carried out by an electrician.

# GENERAL SAFETY (Cont.)

To reduce risk of fire, electric shock or injury, always follow these basic precautions and accident prevention measures when using this appliance, including the below:

**NOTE:** This appliance should be installed by an authorized technician else warranty will be void.

## INSTALLATION

- The product is heavy, be careful when moving it. To avoid back or other injury, have 2 people lift or mechanical aid when installing.
- When unboxing, thoroughly inspect the appliance carefully for any damage. If there is any damage, do not install the appliance. Contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice.
- While installing the appliance make sure that the power cord is not bent or flattened.
- Make sure to remove all packaging materials such as foams and tapes before installing the appliance.
- Make sure if the machine is to be placed on carpet that the ventilation openings in the base are not obstructed
- Install the appliance on a flat level and stable ground.

## WARNING

- Make sure that transport packaging is removed from the rear of the appliance. Do not overload the appliance with too many clothes.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- Appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the product door is restricted.

# GENERAL SAFETY (Cont.)

## USAGE CONDITIONS AND RESTRICTIONS

- Supervision over children is to ensure that they do not play with the appliance. Never allow them to use, play with or crawl inside the appliance. Cleaning and maintenance must not be done by children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or been given instructions on how to use of the appliance in a safe way and understand the hazards with using this appliance incorrectly. Children being supervised not to play with the appliance
- Only for indoor domestic use only. It is not to be used for industrial or commercial use.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- In the process of a hot wash, the door window can become hot. Make sure not to touch it or that no children or pets come into contact with the door window.
- Ensure that emptying all pockets of every item to make sure that there is no hard, sharp objects such as coins, safety pins, bra wires, nails or screws can cause damage to the appliance and has a chance to block the pump.
- Damage or malfunction caused from foreign objects is not covered by your warranty to the appliance.
- Do not operate this appliance outdoors.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.
- Maximum load is 5.0kg for Drying / 8.0kg for Washing.
- Do not block any ventilation openings. Ensure that vents are not covered by anything.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments;
  - Areas for communal use in blocks of flats or in launderettes.

# GENERAL SAFETY (Cont.)

- Only load items that are suitable for the appliance.
- Do not place any open source flames on the appliance such as candles, etc..
- The door/window will be hot after a long cycle, be sure not to touch the window and to keep children away from the appliance.
- **WARNING:** Never stop the appliance before the end of the cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- The only part that can be changed is the filter, other than this nothing else in the appliance contains user serviceable parts. Do not open, disassemble or try to repair the appliance yourself. Only have this appliance serviced by a qualified technician.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.

## CLEANING AND MAINTENANCE

- Before cleaning or maintenance, always unplug the appliance from the power socket. Make sure you pull by the plug, not the cord as this can damage the power cord and cause a hazard.
- Only the filter requires regular cleaning, everything else is non user-serviceable parts. Do not try to repair, disassemble or modify the appliance.
- Check and clean the lint filter on a regular basis
- **Service:** Never try to repair, modify or replace any part of the appliance, unless this manual says you can do so. All other servicing is to be done by a qualified technician, or contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice.

# GENERAL SAFETY (Cont.)

## CAUTION

**ITEMS BELOW ARE NOT SUITABLE FOR DRYING. IT CAN CAUSE FIRE IN THE APPLIANCE OR EXTENSIVE DAMAGE. DO NOT PLACE FOLLOWING IN THE APPLIANCE**

- Items containing rubber or foam like rubber or any other similar textured materials.
- Items that are spotted or soaked with cooking oil or any other flammable items. These other items include kerosene, stain removers, dry-cleaning solvents, alcohol, petrol, turpentine, waxes, hair care products, wax removers.
- Washing the items vigorously beforehand in hot water with extra detergent will reduce, but not completely eliminate the hazard.
- Undergarments that contain metal reinforcements (such as underwire bras). Plastic articles such shower caps and waterproof bibs.
- Rubber-backed articles, clothes with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.
- Fabric softeners or similar products unless recommended by product manufacturer for use in a clothes dryer.

## CAUTION

- Do not use the appliance if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the appliance.
- Do not allow lint to accumulate around the appliance. Clean the Lint Trap and filter after every use.
- Enough ventilation has to be provided to avoid the back-flow of gases into the room from appliances burning other fuels including open fires.
- Remove all objects from pockets such as lighters and matches.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in appliance, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.



**WARNING: Risk of fire**

This symbol alerts you to take care as oil-affected items can ignite, especially when exposed to heat, such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation causes heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so it will create a fire hazard.



# GENERAL SAFETY (Cont.)

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of the appliance cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in the appliance. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in the appliance, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.


## **WARNING:**

Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.


## **IMPORTANT**

Before using the washing machine, you must remove the 4 transport bolts from the rear of the machine.

If you do not remove these transport bolts before first time use, you will damage the unit and also void warranty. You must remove these transport bolts before first time use.

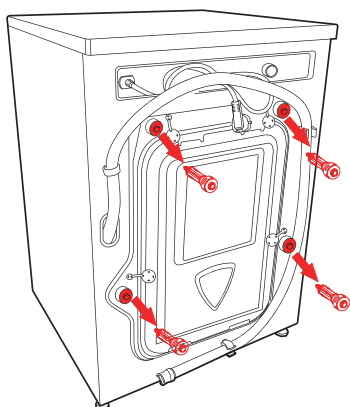

# PRODUCT OVERVIEW

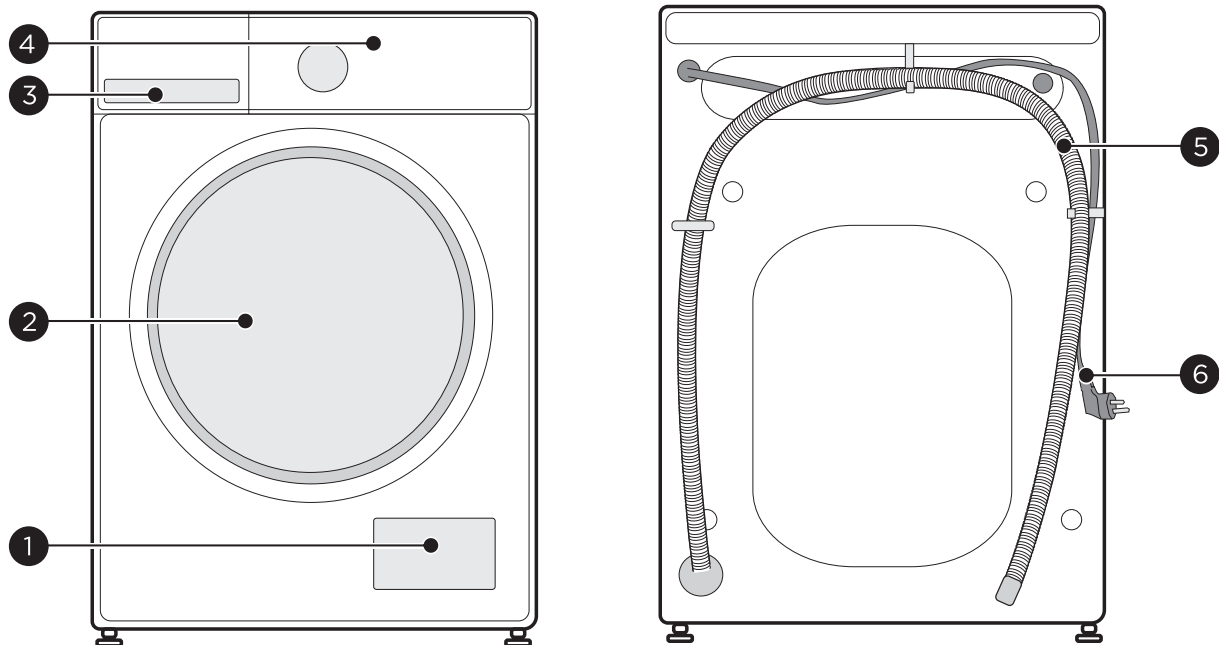

1	Service flap	4	Control panel
2	Door	5	Drain hose
3	Detergent dispenser	6	Power supply cord



## NOTE


The product picture is for illustration only, please refer to real product as reference.

## Accessories

4 x Cover caps	1 x Supply hose cold water	1 x Owner's manual	Acoustic sponge (optional)


# PRODUCT OVERVIEW (Cont.)

## CONTROL PANEL

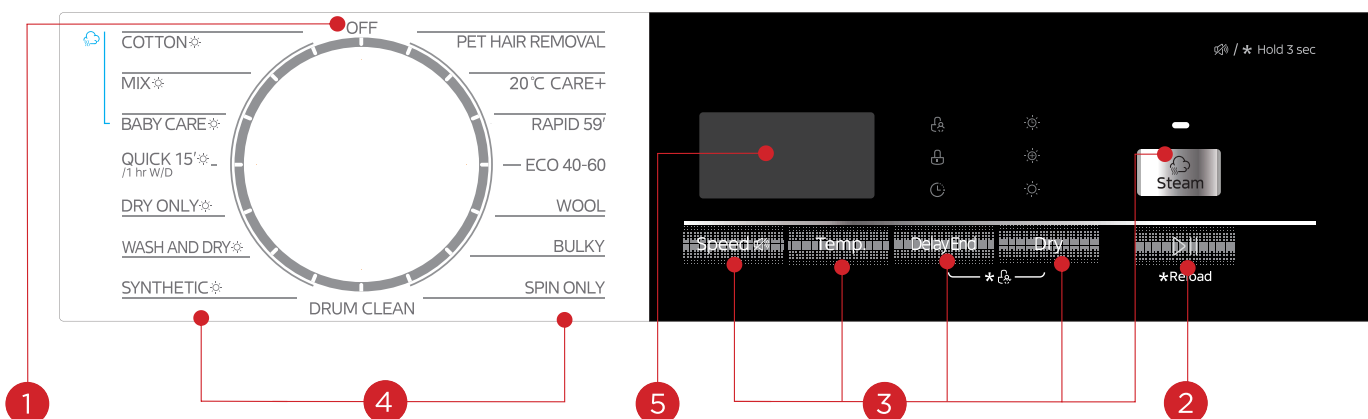

1. **OFF:** Turn the appliance off.
2. **START/PAUSE:** Start or pause your programme.
3. **OPTION:** This allows you to select additional functions.
4. **PROGRAMMES:** Available according to the laundry type.
5. **DISPLAY:** The display shows settings, estimated remaining time, options and status messages.

## DISPLAY

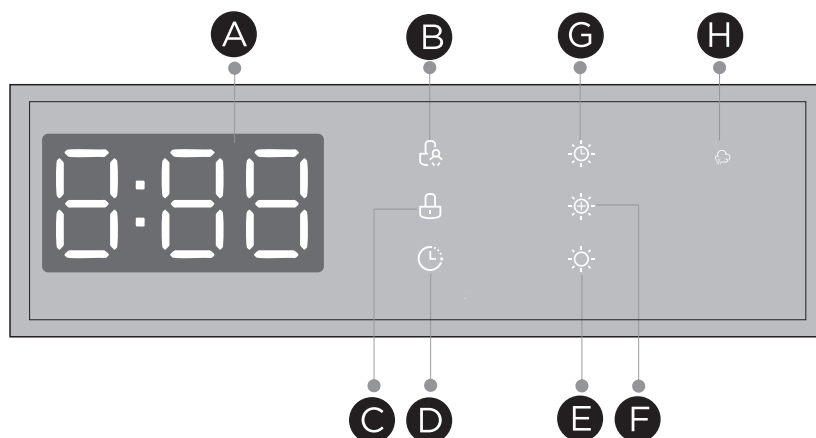

### A Display

Wash Time  
1:25  
Speed  
600  
End  
End

Delay Time  
2H  
Error  
E30  
Temp.  
30

### B Child Lock

### C Door Lock

### D Delay End

### E Normal Dry

### F Extra Dry

### G Timed Dry

### H Steam

**NOTE:** The chart is reference only. Please refer to real product as standard.

# OPERATION

## PROGRAMMES

	Programme	Washing/Drying Load (kg)	Temp. (°C)	Default Time (h:min)
☼	COTTON	8.0/5.0	40	1:28
☼	MIX	8.0/5.0	40	1:20
☼	BABY CARE	8.0/5.0	60	2:01
	QUICK 15'	2.0/--	Cold	0:15
☼	1 hr W/D	1.0/1.0	--	0:58
☼	DRY ONLY	--/5.0	--	3:40
☼	WASH AND DRY	5.0/5.0	--	4:34
☼	SYNTHETIC	4.0/2.5	40	1:58
	DRUM CLEAN	--	90	1:18
	SPIN ONLY	8.0/--	--	0:12
	BULKY	8.0/5.0	40	1:48
	WOOL	2.0/--	40	1:07
	ECO 40-60	8.0/--	--	6:35
	RAPID 59'	4.0/--	30	0:59
	20°C CARE+	4.0/--	20	1:08
	PET HAIR REMOVAL	4.0/--	40	2:04

**NOTE:** The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

# OPERATION (Cont.)















 




Programmes	
COTTON	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
RAPID 59'	Washing few and not very dirty clothes quickly.
SYNTHETIC	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
BABY CARE	Washing the baby's clothes, it can make the baby's wear cleaner. and make the rinse performance better to protect the baby skin.
DRY ONLY	Select it to dry clothes .The drying time according to the load .
MIX	Mixed load consisting of textiles made of cotton and synthetics.
20°C CARE+	Able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C.
PET HAIR REMOVAL	Clean the pet hair and fur from clothing deeply, restrain growth of germ.
Quick 15'	This procedure defaults to Quick 15', press the "Dry" to switch to 1hr W/D.
1hr W/D	This procedure is suitable for washing few and not very dirty clothes quickly. For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts).
WASH AND DRY	The standard energy program for washing and drying.
WOOL	Hand or machine-washable wool or richwool textiles.Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
SPIN ONLY	Spins and drains the water.
ECO 40-60	Able to clean normally soiled cotton laundry declared to be washable at 40 °C or 60 °C, together in the same cycle.
DRUM CLEAN	Specially set in this machine to clean the drum and tube. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.
BULKY	This program is specially designed for washing Bulky.

## NOTE:

- The chart is reference only. Please refer to real product as standard.
- When the programme is finished, "End" will flash on the display, please select the knob to the OFF position.


# OPERATION (Cont.)

## OPTION

Cycle	Additional functions	Default Temp.(°C)	Default spin speed (rpm)
			1400
COTTON	  	40	800
MIX	  	40	800
BABY CARE	  	60	1000
QUICK 15'		Cold	800
1 hr W/D	 	--	--
DRY ONLY	 	--	1200
WASH AND DRY	 	--	--
SYNTHETIC	 	40	800
DRUM CLEAN		90	--
SPIN ONLY		--	1000
BULKY		40	1000
WOOL		40	600
ECO 40-60		--	--
RAPID 59'		30	1000
20°C CARE+		20	1000
PET HAIR REMOVAL		40	1200

**Dry Level**  - Uses dry level to choose three levels of drying: Normal Dry, Extra Dry and Timed Dry.

**Delay End**  - Uses delay end to choose the delaying time 0-24H. Ready exactly when needed. Freshness on your schedule.

**Steam Assistant**  - Uses steam to enhance the washing process, offering better cleaning, fabric care, and hygiene.

**NOTE:** The table shows which cycle offers which options for adjustment.

# OPERATION (Cont.)

## ICON EXPLANATION



### Spin Speed

When needed, the spinning speed can be adjusted pressing the Speed button in the following steps: 1400-0-400-600-800-1000-1200-1400



### Delay End

1. Select a programme.
2. Press the Delay End button to choose the delaying time 0-24H.
3. Press [Start/Pause] to start the delay end operation.



Choose programme



Setting time



Start

To cancel the Delay End function, press the “Delay End” button before starting the program until the display shows 0 H. If the program has already started, switch the appliance off and afterwards on and select a new programme.



### Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps:  
Cold - 20°C - 30°C - 40°C - 60°C - 90°C.



### Steam

Steam is applicable for daily laundries.

The steam can deeply penetrate the fiber, which effectively eliminate bacterias and germs, preventing odors and protecting your health.



### Mute the buzzer



Choose the Programme Press the [Speed]button for 3sec.,  
the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.



### CAUTION

- After Muting the buzzer function, the sounds will not be activated any more.

 
# OPERATION (Cont.)

---



## Child Lock

To avoid mis operation by children.



Press [Delay End] and [Dry] simultaneously for 3 sec. until the buzzer beep. The child lock indicator switches on.



## CAUTION

When the Child Lock is activated, the display will alternately show “CL” and the remaining time.

Pressing any other button will cause the Child Lock indicator to flash.

When the program ends, “CL” and “End” will alternate on the display.

The Child Lock deactivates the function of all buttons except the Child lock button! Only the simultaneous pressing of the two buttons can deactivate the Child Lock! Please deactivate the Child Lock before selecting a new program!



## Dry Level

Press the Dry button continuously to choose the dry level: Normal Dry/ Extra Dry / Timed Dry.

☀Normal Dry(AU): Clothes are ready for storing in the cupboard.

☀Extra Dry(d-3): Clothes are dried complete to be worn directly.

☀Timed Dry: Drying your laundry and finish within given time.

(30/60/90/120/180 minutes)



## NOTE

- Drying hints
  - Clothes could be dried after spinning
  - To ensure quality dry the textiles, please classify them according to their kinds and the drying temperature.
  - Synthetic should be set the proper drying time .
  - If you want to iron the clothes after drying, please put them for a while.
- Clothes not suitable for drying
  - Particularly delicate items such as synthetic curtains, woolen and silk, clothes with metal inserts, nylon stockings, bulky clothes, such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be dried.
  - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
  - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.



# OPERATION (Cont.)

---



## Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To Press [ ▷|| ]3sec. to reload, and start the clothes adding in the midway function.

Please follow the steps as bellow:

1. Wait until the drum stops rotation.
- 2.The door lock is unlocked.
- 3.Close the door when the clothes are reloaded and press the [Start/Pause] button.



Press [Press 3 sec. to reload] 3 sec.

Reload the clothes

Start



## CAUTION

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.
-


# GETTING STARTED

## CAUTION


- Before washing, please make sure the machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, recommended to clean the inner drum by running the “Drum Clean” or other program with the optional temperature of 90°C. Be careful not to put laundry and detergent in the machine.

## 1. Before Washing


1. Plug in

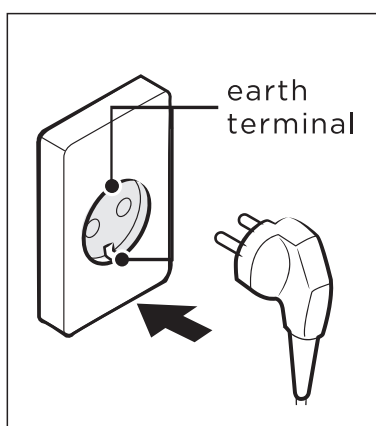


2. Open tap

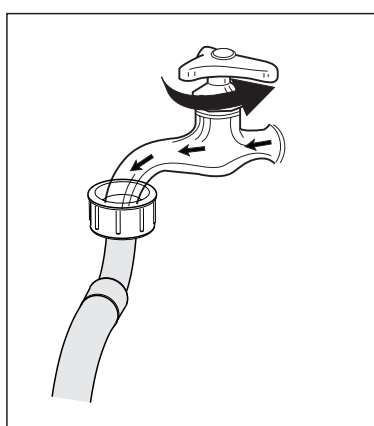


3. Load

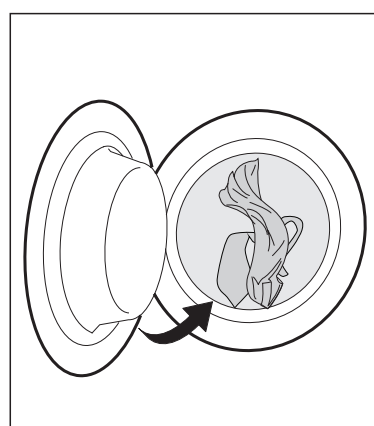

4. Close door

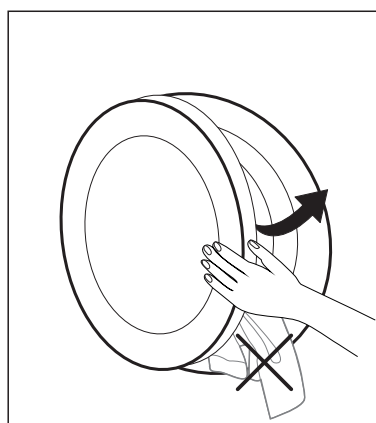

5. Add detergent

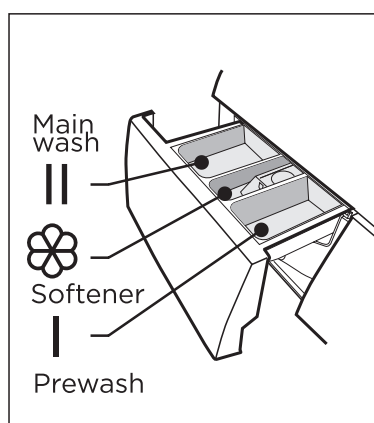


### NOTE:

- Detergent need to be added in compartment I if the pre-wash function is selected.
- When closing the door, please make sure that your clothes are not caught between the sealing ring and the machine door to prevent water leakage caused by pulling and damaging the sealing ring during operation.


# GETTING STARTED (Cont.)

## 2. Washing


1. Select programme

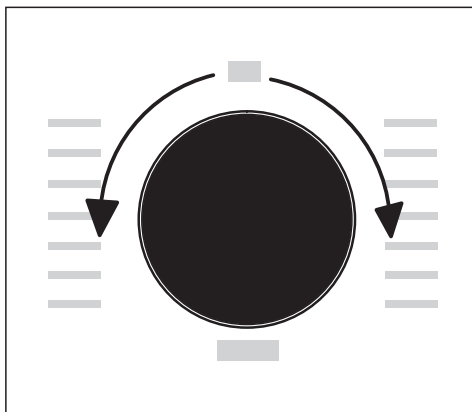

2. Select function or remain default settings

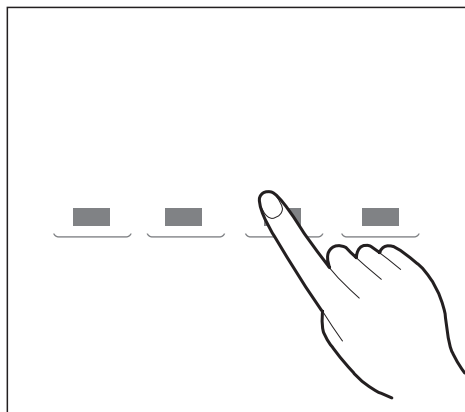

3. Press Start/Pause to start the program

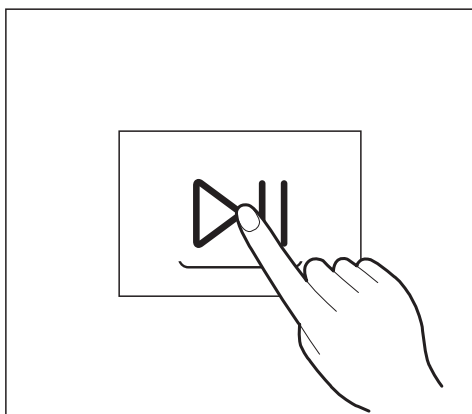

### NOTE


- 1 : If default is selected, step 2 can be skipped.
- 2: The function button line chart is for reference only, please refer to real product as standard.

## 3. After Washing

Buzzer beep and “End” on display.

# PRODUCT INSTALLATION



## Tools Needed If Installation By Yourself (not include)

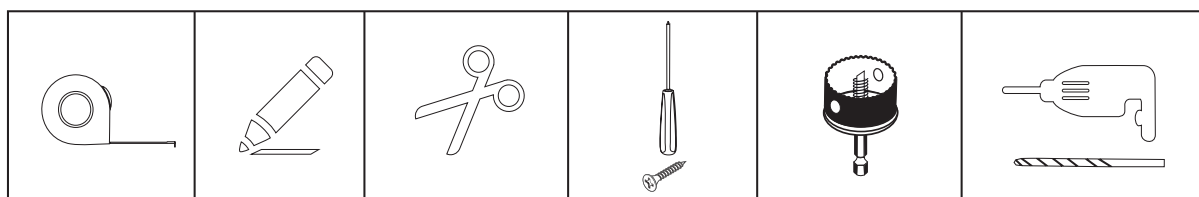

## Installation Area

### WARNING

- Stability is important to prevent the product from wandering!
- Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

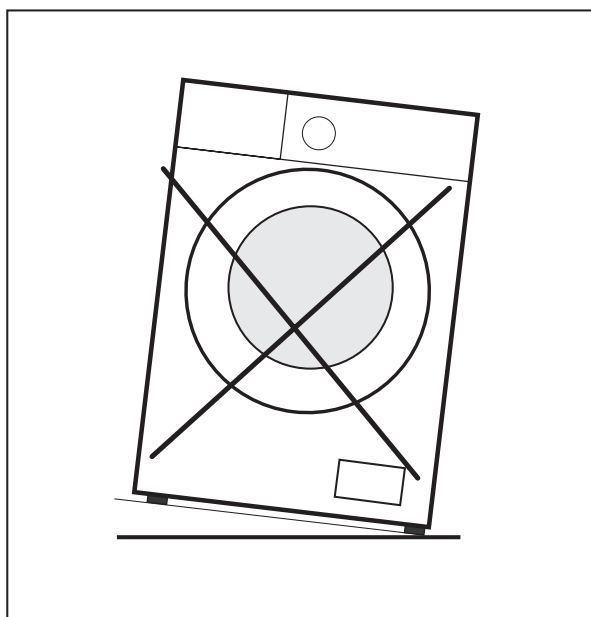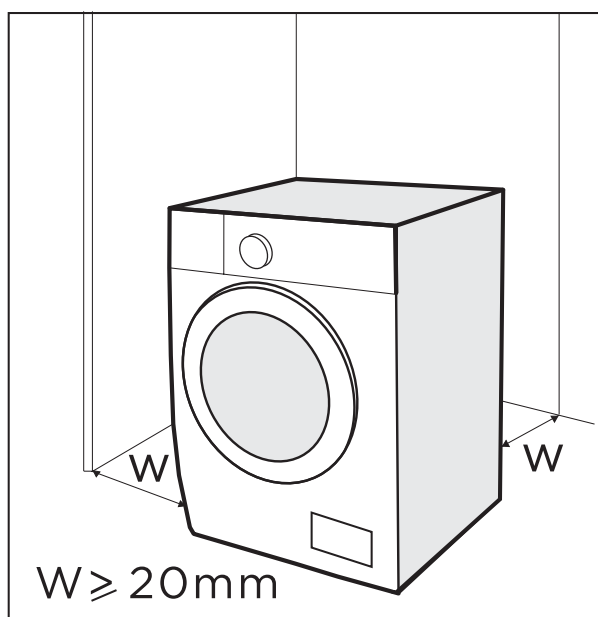


Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above 5 °C .
5. Keep far away from the heat sources such as coal or gas burning appliances.

# PRODUCT INSTALLATION (Cont.)

## Unpacking the Machine

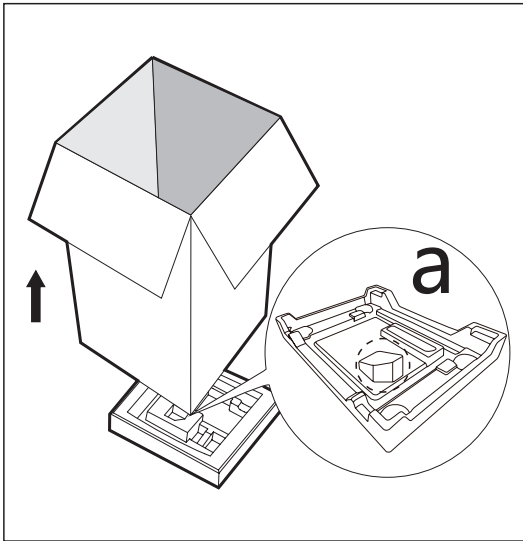

### ! WARNING

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.


1. Remove the cardboard box and styrofoam packing.
2. Lift the machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

## Remove Transport Bolts


### ! WARNING

You must remove the transport bolts from the backside before using the product.


1. Loosen the 4 transport bolts with a spanner.

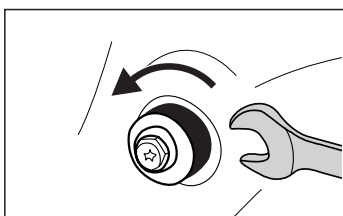

2. Remove the bolts including the rubber parts and keep them for future use.

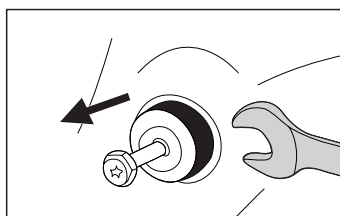

3. Close the holes using the cover caps.

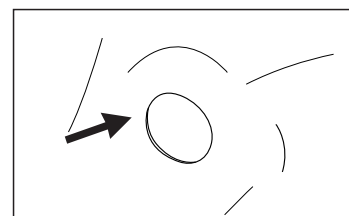


# PRODUCT INSTALLATION (Cont.)

## Levelling the Machine

### WARNING

The lock nuts on all four feet must be screwed tightly against the housing.

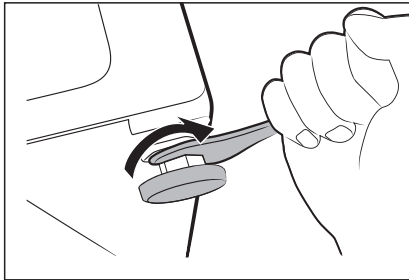


1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level using a spirit level.

## Connect the Water Supply Hose


### WARNING

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

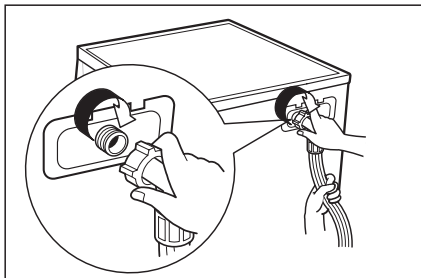

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.

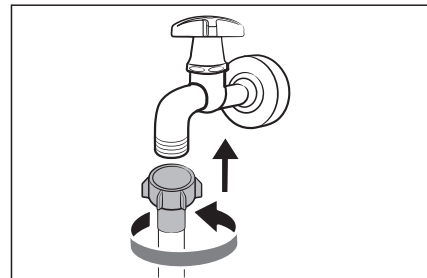

### NOTE

- Connect manually, do not use tools. Check if the connections are tight.

## Drain Hose


### WARNING

- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result in water leakage.
- It is not allowed to remove the buckle of drain pipe.


# PRODUCT INSTALLATION (Cont.)

There are two ways to place the end of drain hose:

1.Put it into the water trough.

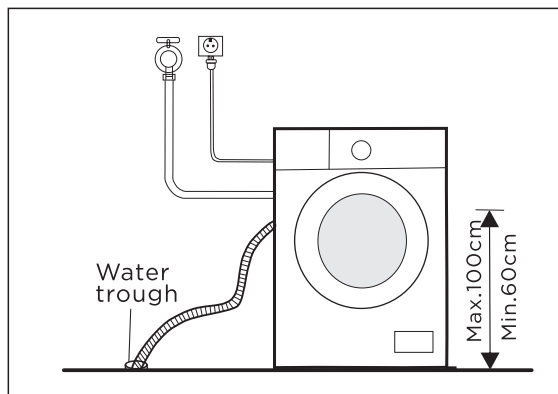



2.Connect it to the branch drain pipe of the trough.

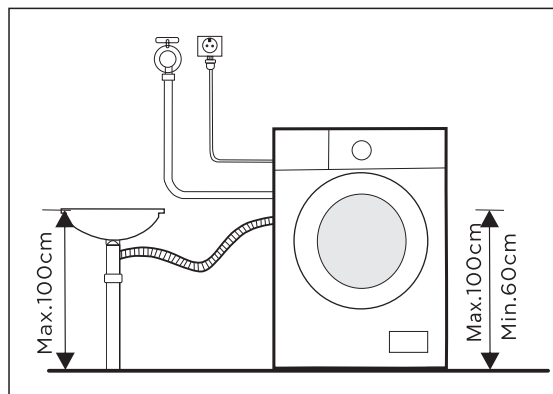

## Acoustic Sponge

### NOTE

- Please make sure to assemble the acoustic sponges, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

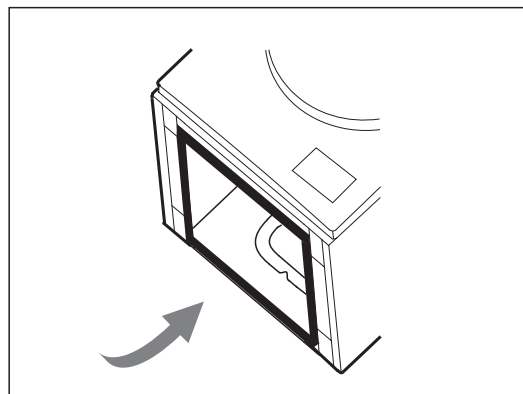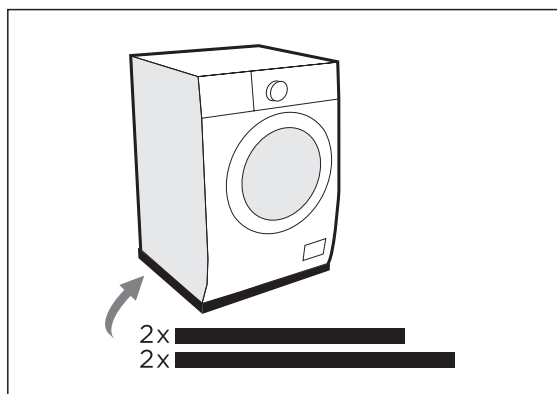


1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection;
2. Stick the 2x longer sponges to the longer bottom edges of machine, and the 2x shorter sponges to the shorter bottom edges.

# INSTRUCTIONS


## Before Each Washing

- The ambient temperature of the machine should be 5°C-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine properly.


1. Take all items out of the pockets

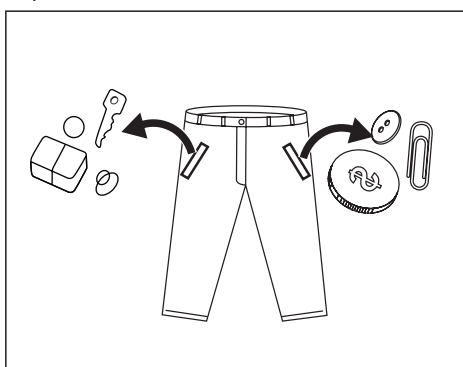


2. Sort laundry according to color and textile type

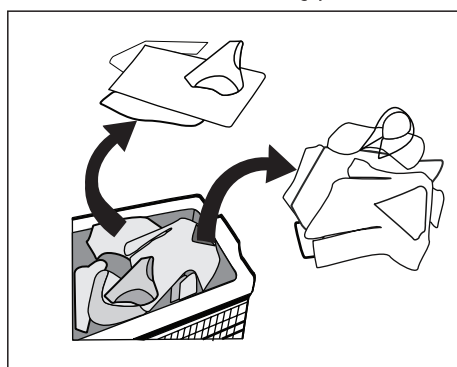

3. Tie together long textile strips and belts, close zips and button

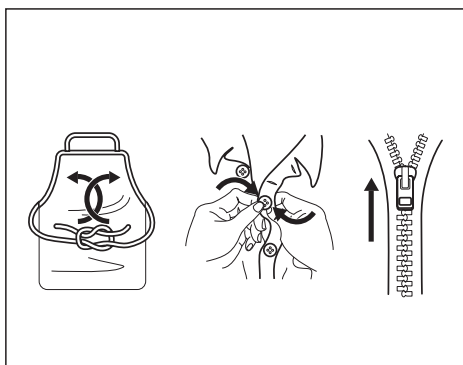

4. Put small items into a laundry bag

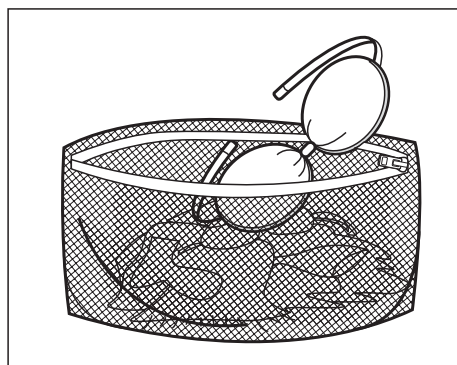


## ! WARNING


- It is prohibited to wash or dry clothes that adhere to any volatile or flammable substance such as cleaning agent, dry cleaning agent, spot remover, acetone, gasoline, kerosene, beauty oil, massage oil, animal oil, machinery oil, dry cleaning oil, volatile agent, alcohol, turpentine, wax, wax remover, banana water, disinfectant tablets, resin, etc.
- Washing single clothes items may easily create big eccentricity. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, spin or dry water-proof seats, mats, or clothing.



# INSTRUCTIONS (Cont.)

## Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
-  Release button to pull out the dispenser

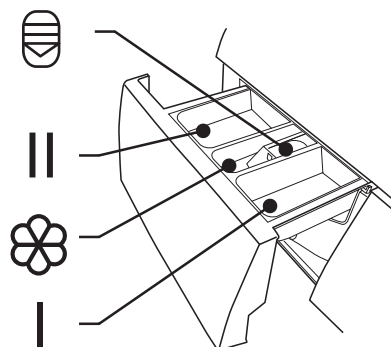

### CAUTION

- Detergent only need to be added in “compartment I ”after selecting pre-wash function.
- Do not put laundry beads into the detergent dispenser.

Programme	I	II / 	☼	Programme	I	II / 	☼
COTTON	●		○	DRUM CLEAN			
MIX	●		○	SPIN ONLY			
BABY CARE	●		○	BULKY		●	○
QUICK 15'	●		○	WOOL		●	○
1 hr W/D	●		○	ECO 40-60		●	○
DRY ONLY				RAPID 59'		●	○
WASH AND DRY	●		○	20°C CARE+		●	○
SYNTHETIC	●		○	PET HAIR REMOVAL		●	○

● Means must

○ Means optional

# CLEANING AND MAINTENANCE


## Cleaning and Care

### **WARNING**

- Always unplug the appliance and close the water tap before cleaning and maintenance.
- When cleaning the product, do not stretch your hands, feet or arms into the bottom of the machine case to prevent scratches.

### Cleaning the Cabinet

Proper maintenance on the machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance.

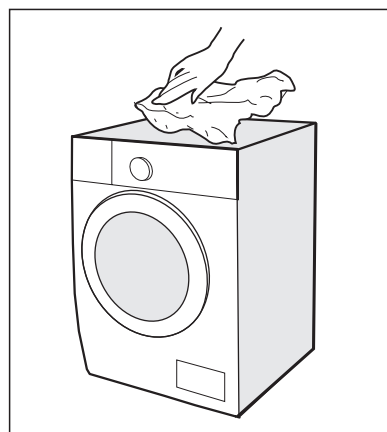

### **CAUTION**

- Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

### Cleaning the Drum


Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

### **NOTE**

- Keep any laundry away from the machine while cleaning the drum.

### Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages. Remove any coins, buttons and other objects from the seal after each wash. Clean the door seal and glass every month to ensure the normal operation of the appliance.

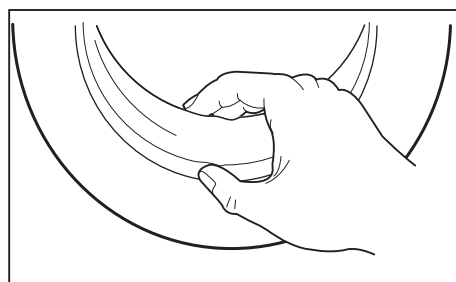


# CLEANING AND MAINTENANCE (Cont.)

## Cleaning the Inlet Filter


### NOTE

- Diminishing water flow is a sign that the filter needs to be cleaned.


1. Close the tap and remove the water supply hose from it.

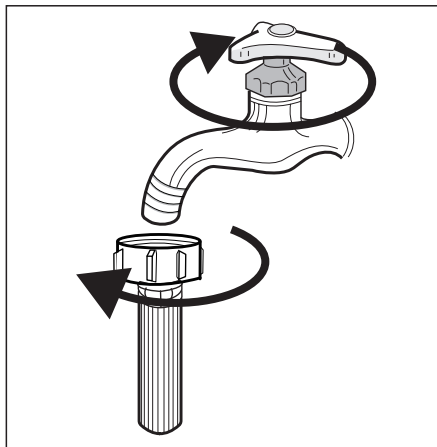


2. Clean the filter with a brush.

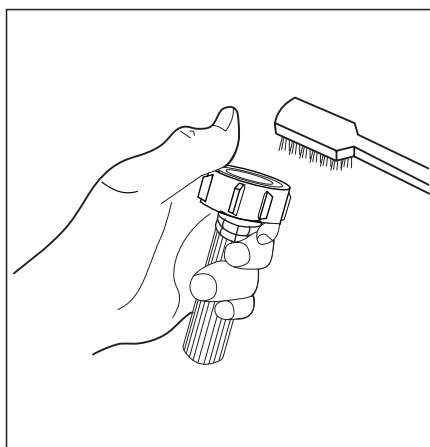

3. Unscrew the water supply hose from the backside of the machine.  
Pull out the filter with long nose pliers.

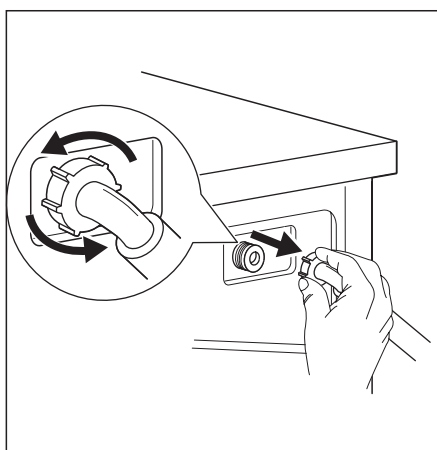


4. Use a brush to clean the filter.

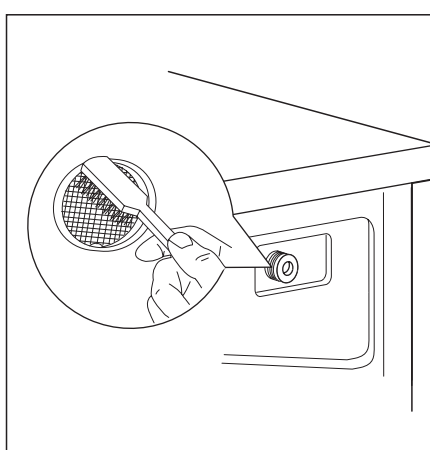


5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

# CLEANING AND MAINTENANCE (Cont.)


## Cleaning the Detergent Dispenser

- Press down the release [  ] on the softener cover and pull the dispenser drawer out of the recess.
- Lift the softener cover off the dispenser drawer and wash both items with water.
- Clean the inside of the recess with a brush.
- Restore the softener cover and push the drawer back into the recess.


1. Press the release and remove the dispenser drawer

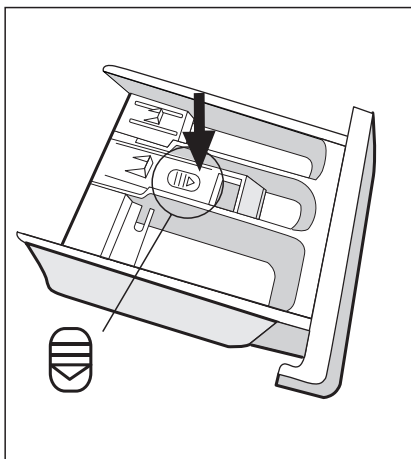


2. Clean the dispenser drawer and the softener cover under water

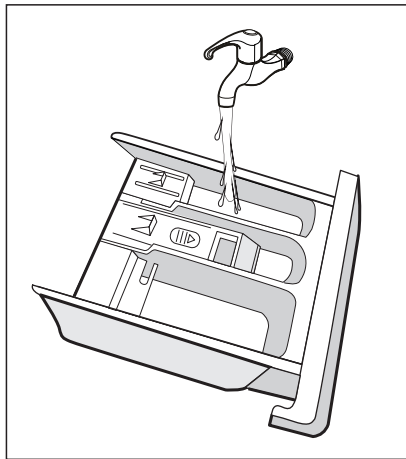

3. Clean the recess with a soft brush

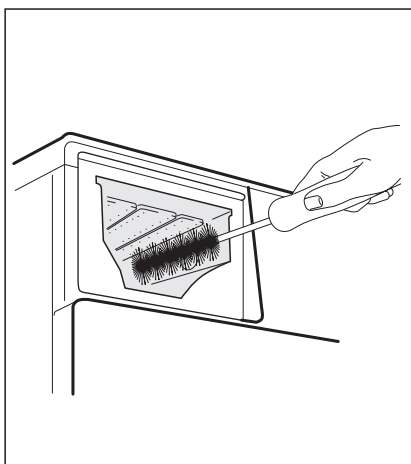

4. Insert the dispenser drawer

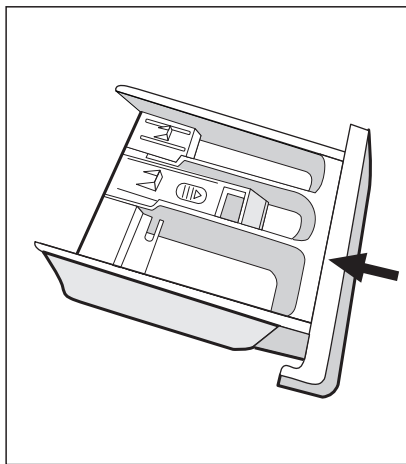

### NOTE

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


# CLEANING AND MAINTENANCE (Cont.)

## Cleaning the Drain Pump Filter


### WARNING

- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.


1. Open the lower cover cap

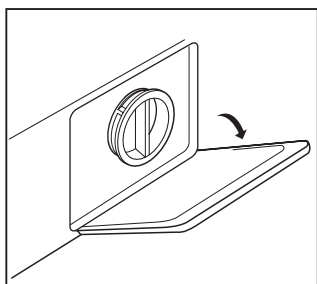


2. Open the filter by turning to the counter clockwise

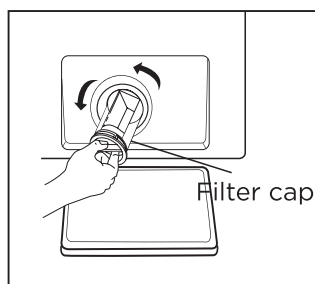

3. Remove extraneous matters

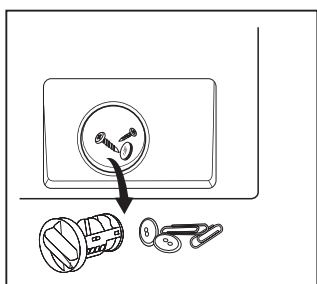

4. Carefully reinsert the filter and screw the lower cover cap in clockwise

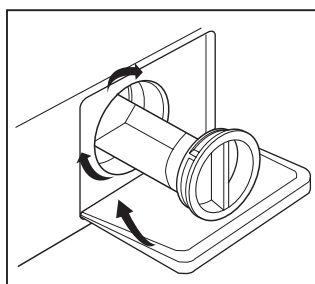

### CAUTION

Make sure that valve cap and emergency drain hose are reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.

- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

# FAQs

Please be sure to contact our call centre on [info@ayonz.com](mailto:info@ayonz.com) if you cannot identify the issue with the below information.

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly.Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor.

## Error Codes

Description	Possible Cause	Solution
<b>E30</b>	Door is not closed properly.	Close the door properly and restart.
<b>E10</b>	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
<b>E21</b>	Overtime water draining	Check the drain hose for blockage.
<b>E12</b>	Water overflow	Restart the appliance.
<b>EXX</b>	Others	Restart the appliance. If problem persists, please contact the customer service.

# SPECIFICATIONS

<b>Power Supply</b>	220-240V ~ 50Hz
<b>Standard Water Pressure</b>	0.05MPa~1MPa
<b>Washing/Dry Capacity</b>	8KG / 5KG
<b>Rated Power</b>	1900W
<b>Dimensions</b>	595 x 540 x 850 mm (W x D x H)
<b>Weight</b>	Net: 63 kg
	Gross: 66 kg

# TELEFUNKEN

**CUSTOMER HELPLINE:**

info@ayonz.com  
02 8279 8606

**DISTRIBUTED BY:**

Ayonz Pty Ltd