

TELEFUNKEN

2.1CH ULTRA SLIM SOUNDBAR
WITH BUILT-IN SUBWOOFER

TL2100SBI



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety Instructions	4
Remote Control	7
Product Overview	8
General Operations	10
Bluetooth Mode	10
AUX Mode	10
HDMI Mode	10
Optical Mode	11
USB Mode	11
Devide Compatibility	11
Troubleshooting	12
Specifications	13
Support	Last Page

GENERAL SAFETY INSTRUCTIONS

Read this manual thoroughly before you start using the Soundbar.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the soundbar or its controls and to call for an adult to assist.
- Do not expose this product to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling when mounted and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Soundbar, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- Ventilation should not be impeded by covering the ventilation openings.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- No naked flame source, such as candles, should be placed on the product.
- Unplug the Soundbar during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc. Do not insert objects into the slots available on the products. As this could result in the product being damaged and could cause a fire.

GENERAL SAFETY INSTRUCTIONS (Cont.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power supply from the wall socket.
- Please beware that dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Soundbar near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the soundbar.

REMOTE CONTROL



⏻ : power ON/OFF

Treble-: press to decrease the treble effect

Treble+: press to increase the treble effect

VOL+: press to increase the sound volume

VOL- : press to decrease the sound volume

⏮ : press to switch to previous song

⏭ : press to switch to previous song

MUSIC: press to select Music sound effect setting

MOVIE: press to select cinema sound effect setting.

DIALOGUE: press to select Speech sound effect settings

BASS-: press to decrease the bass effect

BASS+: press to increase the bass effect

M/🔊: short press to switch to different mode, long press to mute.

▶/II : short press to play/pause, long press to disconnect Bluetooth.

CAUTION!

BATTERY PRECAUTIONS

- Do not use other batteries other than the one specified in this manual.
- Danger of explosion if incorrectly replaced by a battery other than the one specified.
- Do not store battery with other metallic objects, doing so can cause the battery to short-circuit, leak or explode.
- Ensure the battery is not exposed to excessive heat, direct sunlight or fire.
- Do not try to short-circuit, disassemble or throw the battery into a fire.
- Dispose of batteries promptly and correctly, observing any local hazardous waste regulations.

PRODUCT OVERVIEW

FRONT VIEW



 
TOP VIEW




BACK VIEW




BOTTOM VIEW



PRODUCT OVERVIEW (Cont.)

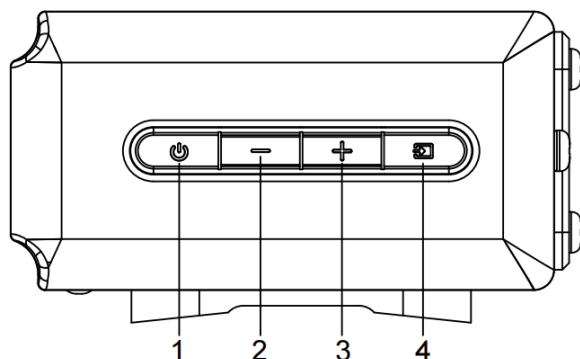 

 1. **Short** press to power ON, long press to power OFF.
2. **Press** to volume down.
3. **Press** to volume up.
4. **Short** press to switch to different mode.

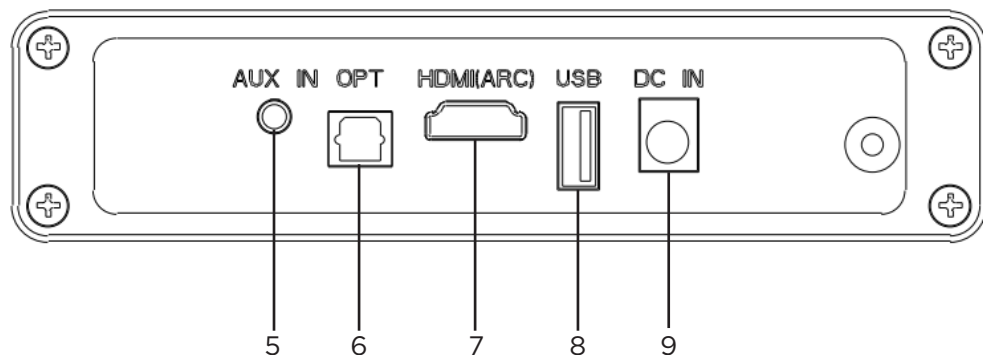

5. **AUX** - 3.5mm line in jack for external audio input.
6. **OPT** - Optical input.
7. **HDMI ARC** - HDMI(ARC) input
8. **USB** - USB playback
9. **DC IN**

Function Indicator Light

Standby	RED
Searching for BT devices	BLUE FLASHING
BT Connected	BLUE
AUX In	GREEN
Optical	YELLOW
HDMI (ARC)	PINK
USB	PURPLE

GENERAL OPERATION

BLUETOOTH MODE

After power on, the soundbar directly enters Bluetooth mode with flashing LED light and voice prompt.

1. Turn on the Bluetooth function on your devices and the device will start to search for the Soundbar.
2. Select “TL2100SBI” from the list of found devices.
3. If asked, enter the password “0000” and press OK.


Note: The Bluetooth playback is controlled by your device and the buttons on the remote control.

Note: The operation range for the Bluetooth connection is 10 meters.

Note: If a mobile phone on which you are playing music receives a call, the music will be interrupted and not played. After the call ends, the devices are connected to each other again and playback continues.


Remarks: Press ►/⏮ button on Remote Control for 3 seconds to disconnect the Bluetooth pairing.

AUX MODE

1. Ensure that the soundbar is connected to the TV or other audio device via an audio cable.
2. Press the  button on the soundbar or **M/⏮** on remote control to switch to “AUX IN” mode with voice prompt.



Note: The playback is controlled by your device and by the buttons on the remote control.

HDMI MODE

1. Ensure the HDMI ARC function is activated on your TV, and digital output is set to PCM.
1. Press the  button on the soundbar or **M/⏮** button on the remote control to switch to “HDMI ARC” mode with voice prompt. At this point, connect the HDMI cable (not supplied) to the TV set, and then to the HDMI ARC jack on the back of the soundbar.



GENERAL OPERATION (Cont.)

OPTICAL MODE

1. Ensure that the soundbar is connected to the TV or other audio device via an Optical cable (not supplied).
2. Press the  button on the soundbar or  button on the remote control to enter the “Optical” mode with voice prompt.

Note: The playback is controlled by your device and by the button on the remote control. Set TV audio format to PCM.

USB MODE

After power on, insert the USB into the USB jack of the soundbar. The Soundbar automatically goes to USB playback mode and plays the music in USB. Press  button to play and pause the music. Press  button to select music up and down.

DEVICE COMPATIBILITY

The soundbar theoretically supports all mobile phones with Bluetooth function and any related equipment connect to Bluetooth and play music.

TROUBLESHOOTING

Troubles	Solutions
Bluetooth paired connection cannot be completed	Other mobile device has connected before use and the mobile device has not left as well as its Bluetooth is not off. When it connects, Bluetooth of this device will automatically find the Bluetooth device and connect. First, turn off Bluetooth of the connected Bluetooth devices, then the next Bluetooth device can be found and normally paired to connect.
Volume of Bluetooth playback is low	<ol style="list-style-type: none">1. After connections with mobile devices, volume of Bluetooth device is not up but at the default output level. Turn on the mobile device output.2. Output volume of Bluetooth device is low itself.
Short Bluetooth connection distance	Obstruction exists between mobile devices and Bluetooth device. Remove obstructions.
Bluetooth connection plays normally, sometimes with broken sound.	<ol style="list-style-type: none">1. Obstruction exists between mobile devices and Bluetooth device. Remove obstructions.2. Too far away from Bluetooth device to connected devices, beyond the connection range. Shorten the distance between the Bluetooth device and mobile devices.
Silent play after Bluetooth connection	After connections with mobile devices, Bluetooth device audio is off. Turn on the phone's output volume.

SPECIFICATIONS

Rating	20Vdc 1.8A	
Frequency Response	75Hz-15KHz	
Bluetooth	V5.3	
Bluetooth Range	Up to 10m	
Unit Dimensions	Soundbar: 810 (w) x 81 (d) x 44.7 (h) mm	
What's In The Box	1 x Soundbar	1 x Power Adapter
	1 x Remote Control	1 x Instruction Manual
	1 x 3.5mm to RCA Cable	1 x Warranty Card
	1 x Wall-mounted Brackets	

TELEFUNKEN

TELEFUNKEN and the shown TELEFUNKEN-logos are trademarks of TELEFUNKEN Licenses GmbH used under a trademark license by Ayonz Ltd.

THIS PAGE HAS
BEEN LEFT BLANK
ON PURPOSE.

THIS PAGE HAS
BEEN LEFT BLANK
ON PURPOSE.

TELEFUNKEN

CUSTOMER SUPPORT:

info@ayonz.com
02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd